
LR200PO.1

BOXMORE


Spacer configuration for Porsche Front Woofer

WOOFER TYPE	CAR MODEL	UPPER SPACER	LOWER SPACER	FIGURE
BXA S8FL	Taycan 9J1	X	✓	B
BXS W200 and similar	Taycan 9J1	✓	X	C
BXA S8FL	All others	X	X	A
BXS W200 and similar	All others	X	✓	B


A

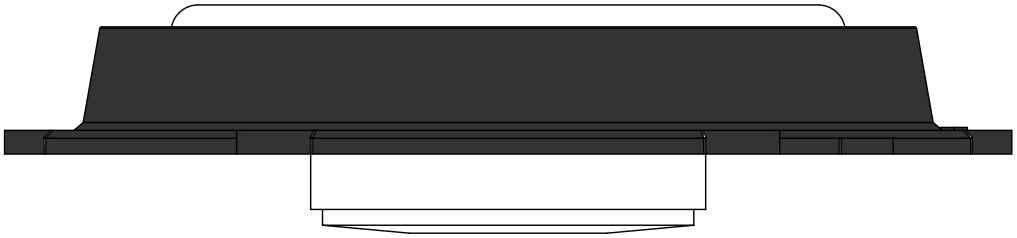

B

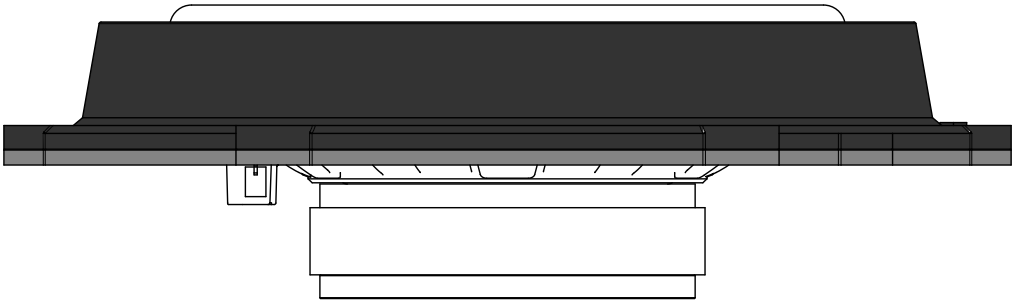

C

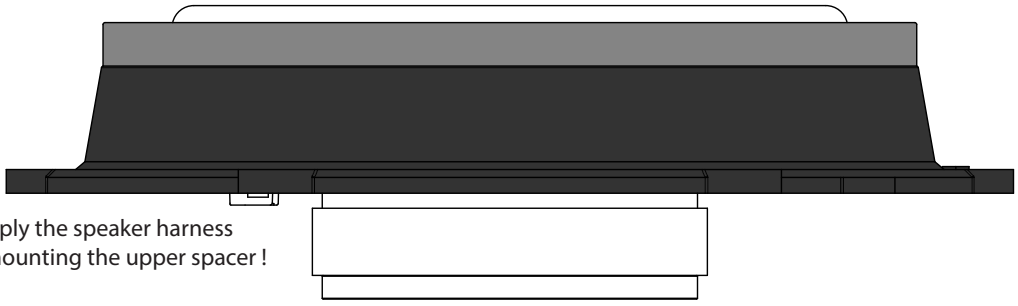

Note: Apply the speaker harness before mounting the upper spacer !

Installation:

Please use the supplied foam gaskets between the speaker ring and spacers to prevent water leaks.

There may be vehicle-speaker combinations for which the information in the chart does not apply. The spacer configuration may be different.

Check the mounting depth to ensure that the speaker magnet does not touch any parts of the vehicle, such as the window mechanism.

Check for sufficient clearance between the speaker cone/surround and the doorpanel/grille, it shouldn't be able to touch the door trim during high excursion.